

Door contact



■ Two wire sensor

If a door contact is connected to the reader of the MLR / MLU3000 and MLR / MLU5000 systems, our MLM Administration Suite will show you the current status of the enclosure door and enable the sabotage alarm function.



Door contact

Item number

MLA Door contact
607-5959.00-00400