




- Integration into existing management systems
- Label holder with customizable backlit LED
- LED for handle status
- No key override
- Interface via closing contact / direct power supply


## Dimension

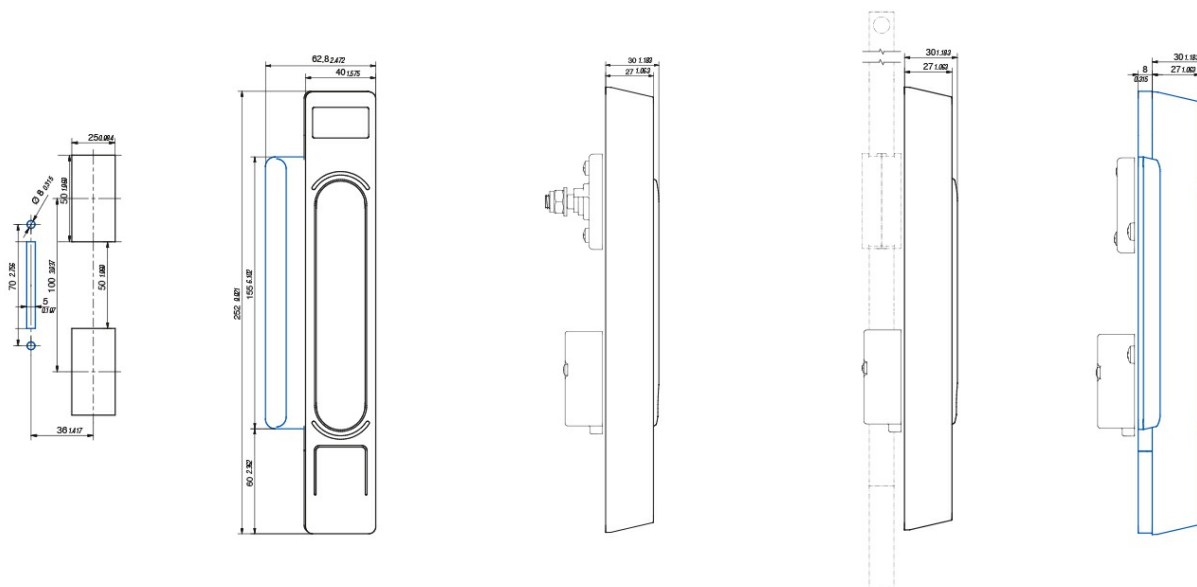

## Technical Details

- Power Supply: 12/24 V ± 10% (DC)
- Bias-Current: 40mA (DC)
- Max Current: 440mA (DC)
- Temperature range: -20C to +70C
- Sheet metal thickness from 1.5-2mm (plus powder coating)
- Top mounting screws Tq to 1.0-1.2Nm
- Bottom cap screws Tq to 0.4Nm

## Connection

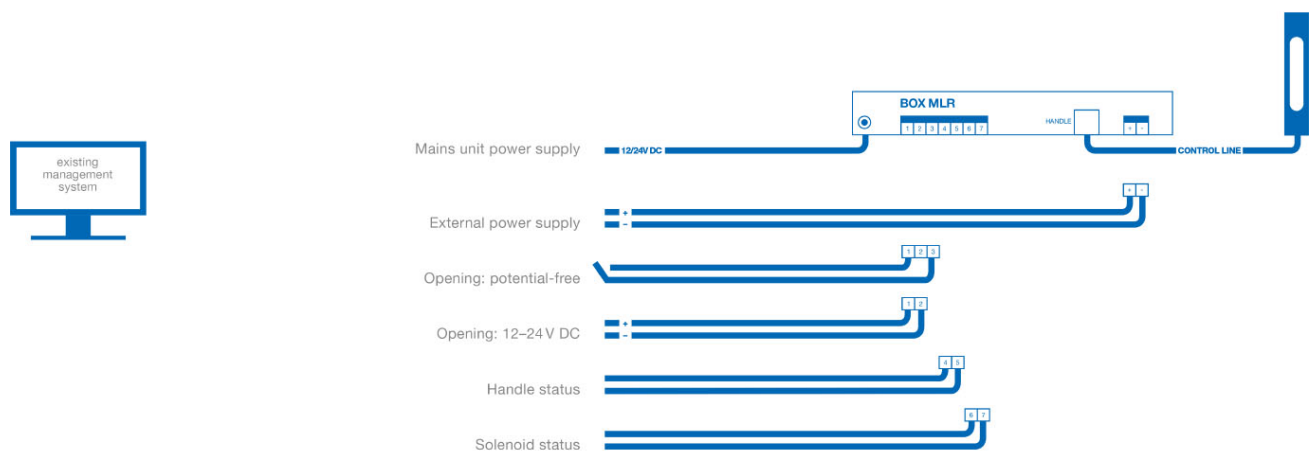

## MLR1000

The MLR1000 provides a hardware interface to integrate with an existing management system. The system unlocks via closing contact or by applying voltage (12-24 V DC).

## LED Status



# MLR1000

## Item number

MLR1000 for Offset  
610-9507.07-07101

MLR1000 for Rod Latch  
610-9501.07-07101

MLR1000 for Cam Latch  
610-9539.07-07101

MLR1000 for Rittal  
610-9545.07-07101

## Delivery

Swinghandle