




- Label holder with customizable backlit LED
- LED for handle status
- No key override
- Wiegand interface
- Multi-frequency antenna (125kHz and 13.56MHz) HID Prox, HID iClass, Mifare Classic, Mifare DESFire EV1, Mifare DESFire EV2, PIV LEAF

Dimension

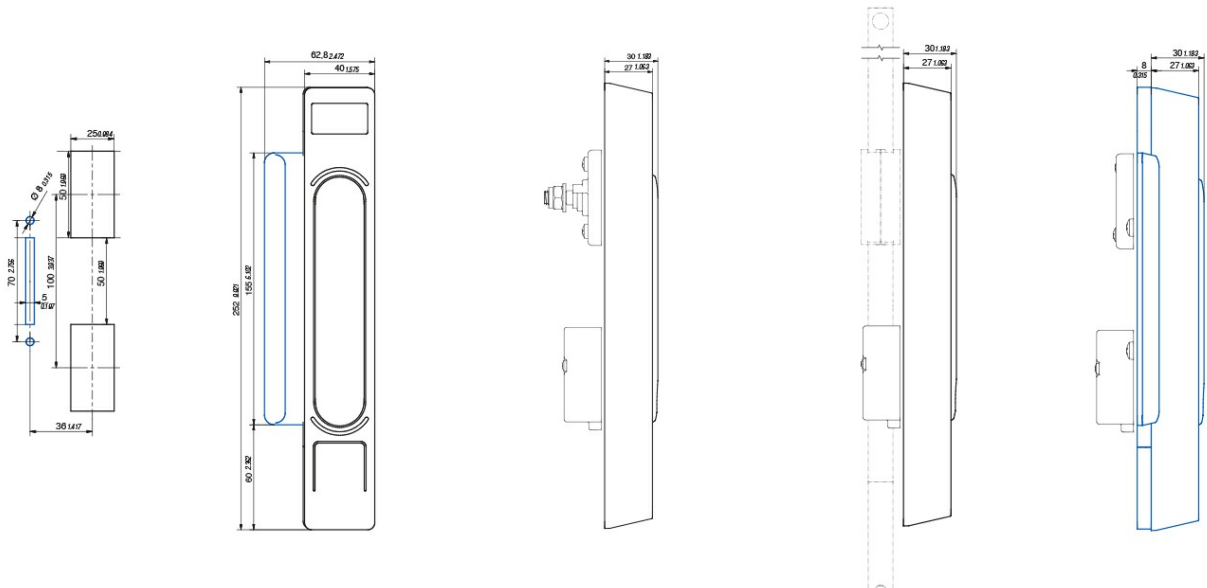

Technical Details

- Power Supply: 5V +10% / 12V ± 10% (DC)
- Bias-Current: 180mA / 60mA (DC)
- Max Current: 400mA / 130mA (DC)
- Data Pulse Interval: 50µs
- Data Signal Delay: 2ms
- Sheet metal thickness from 1.5-2mm (plus powder coating)
- Top mounting screws Tq to 1.0-1.2Nm
- Bottom cap screws Tq to 0.4Nm

Connection



■ Handle Status	■ PINK
■ Authorized (LED GRN)	■ YELLOW
■ Unauthorized (LED RED)	■ BLUE
■ Data 0	■ GREEN
■ Data 1	■ WHITE
■ 12 V PWR	■ RED
■ Ground	■ BROWN
■ 5V PWR	■ GREY

LED Status



Item number

MLR2500 for Offset
611-9205.00-00000

MLR2500 for Rod Latch
611-9204.00-00000

MLR2500 for Cam Latch
611-9203.00-00000

Delivery

Swinghandle